Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.

• **1er Photo:** Protection de moteur en aluminium et kit de composants. Appliquer l'item Nº3 (Bande de Protection) sur l'intérieur de la partie centrale de la protection afin de rester entre le châssis de la moto et la protection en aluminium.

• **2er Photo:** Appliquer l'item Nº2 (Fixation DTC) avec l'item Nº1 (Vis Spéciale DTC) sur la partie avant de la protection.

• **3er Photo:** Monter la protection première partie arrière. Positionner les fixations avant précédemment montées et réglez.


Serrer toutes les vis.



ALUMINUM MX ENGINE GUARD

HONDA CRF 250R 2010-2013

Ref.: 2AS0610064

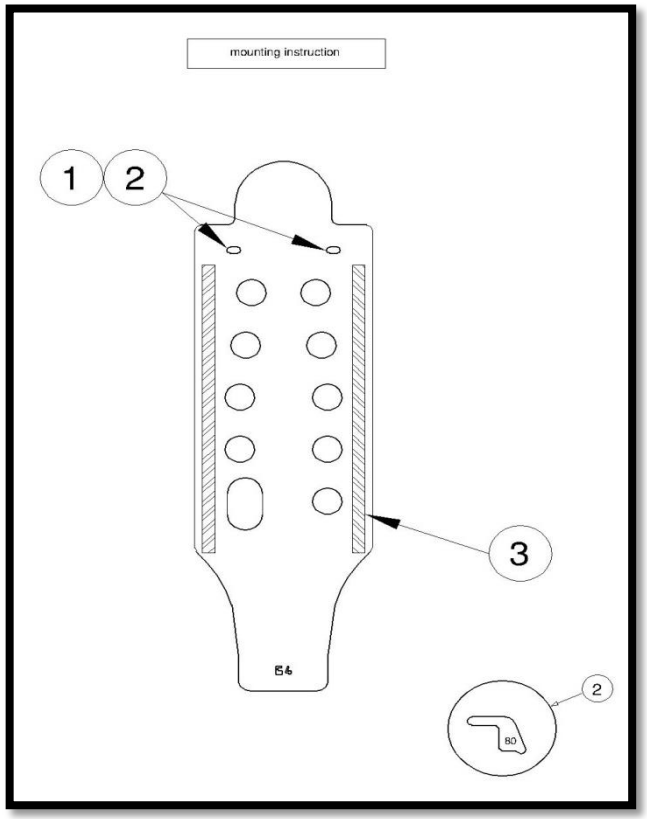

ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
	ACESSÓRIOS (ACESSORIES)		
3	Tira Protetora / Protective Strip	1 Mt.	1
2	Fixação DTC / DTC Clamp	Nº80	2
1	Paraf. Especial DTC / Special Screw for DTC	7x25	2

Assembly Sequence / Instrução de Montagem

English:

Attention – Follow the assembly instruction sequence has you can see in the photos.

• **1st Photo:** Aluminum engine protection part and kit of components. Apply item Nº3 (Protective Strip) on the inside of the central part of the protection in order to stay between the frame of the bike and the aluminum protection.


• **2nd Photo:** Apply item Nº2 (Clamps DTC) with item Nº1 (Special Screw for DTC) on the front part of the protection.


• **3rd Photo:** Mount protection first rear part. Place in to position the front clamps previously mounted and adjust.


Tight all screws.

ALUMINUM MX ENGINE GUARD

HONDA CRF 250R 2010-2013

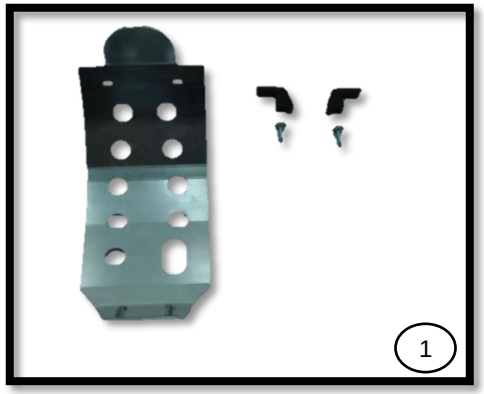

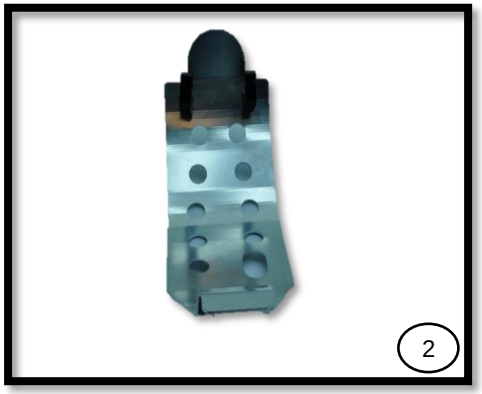

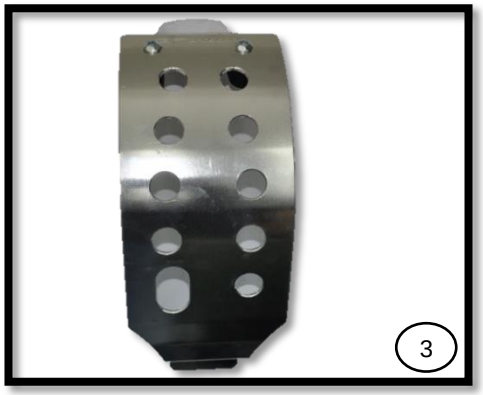

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

• **1º Foto:** Proteção de motor em alumínio e kit de componentes. Aplicar item Nº3 (Tira Protetora) no interior da parte central da proteção de forma a ficar entre a proteção de alumínio e o quadro da moto.

• **2º Foto:** Aplicar o item Nº2 (Fixação DTC) com o item Nº1 (Parafuso Especial DTC) na parte da frente da proteção.

• **3º Foto:** Montar proteção iniciando pela parte de trás. Posicionar as fixações da frente montadas anteriormente e ajustar.

Apertar todos os parafusos.

ID.022.02

DATE: 13/06/2019