

Português:

Atenção – Seguir a sequência de montagem das fotos.

- **Foto A:** Remover protecção de origem.
- **Foto B:** Montar protecção no quadro da moto com o item N°1 (Screw) na parte de trás da protecção.
- **Foto C:** Aplicar o item N°2 (Screw) na parte da frente da protecção.
- **Foto D:** Apertar todos os parafusos.


Français:

Attention: Suivre le séquence de photos d'assemblage.

- **Photo A:** Enlever la protection de origine.
- **Photo B:** Monter la protection sur le cadre de la moto avec l'item N°1 (Screw) partie arrière de la protection.
- **Photo C:** Appliquer l'item N°2 (Screw) sur la partie avant de la protection.
- **Photo D:** Serrer toutes les vis.



Engine Guard Trail
KTM 950 Adventure 2002/06
KTM 990 Adventure 2006/12
Ref: 2AS0900013

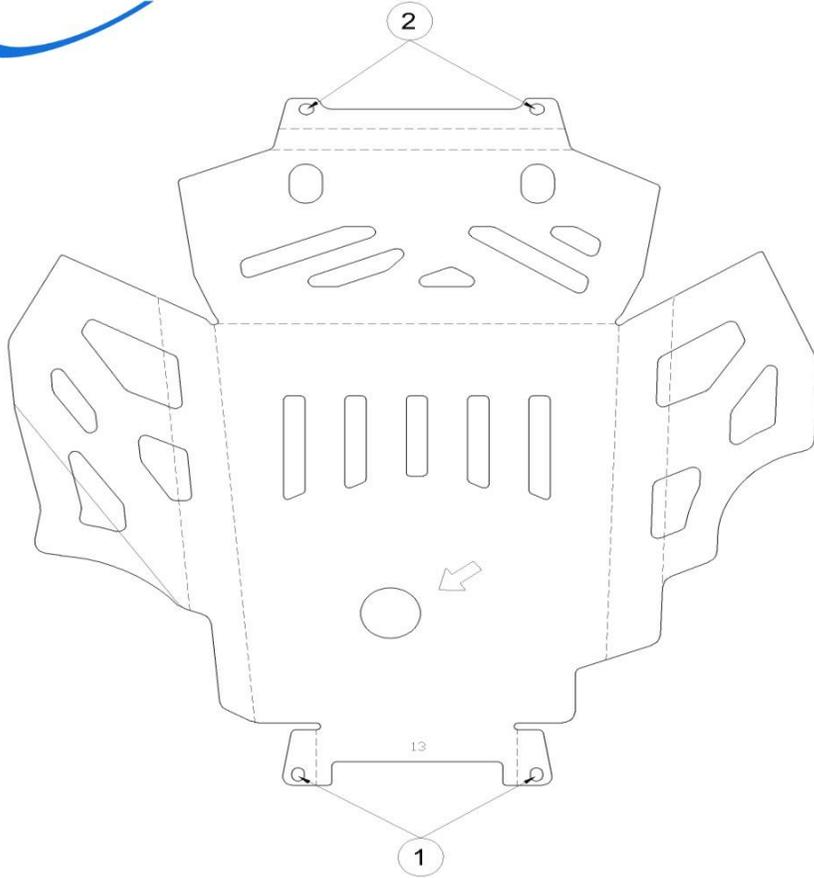

ID.013.01

Item N°	Reference	Component	Description	Quant.
2	-	Screw hexagonal Head	M 8 X 20	2
1	-	Screw hexagonal Head	M 8 X 16	2

Assembly Sequence

- English:**
Attention - Follow the installation sequence as you can see in the photos.
- **Photo A:** Remove original protection.
 - **Photo B:** Mount protection in the bike frame with item N°1 (Screw) in the rear part of the protection.
 - **Photo C:** Apply item N°2 (Screw) in the front part of the protection.
 - **Photo D:** Tight all screws.

