


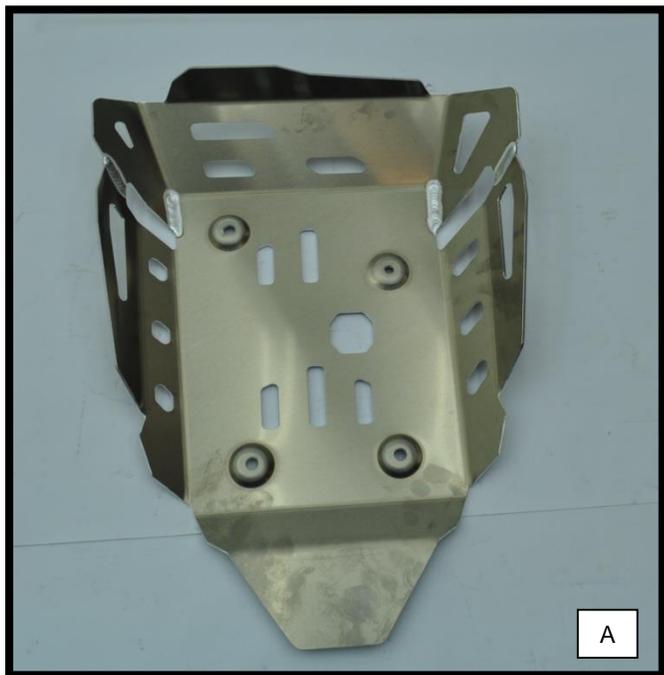

Skid Plate
BMW GS 1200 <= 2007
Ref: 2AS090003A





Instrução de Montagem / Assembly Sequence

English:

Attention – Follow the assembly instruction sequence as you can see in the photos.

- Photos A and B: Mount the aluminum protection with original screws.

Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.

- Photos A et B: Monter la protection en aluminium avec les vis d'origine.

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

- Fotos A e B: Montar a proteção de alumínio com parafusos de origem.

