





Português:

Atenção – Seguir a instrução de montagem como desmonstra as fotos.

- **1º foto:** Retirar parafusos de origem ponto (A) e (C).
- **2º/3º fotos:** Aplicar carenagem lado esquerdo no ponto (A) utilizando parafuso de origem e ajuste.
- **4º foto:** Aplicar item N° 2 e N° 3 no ponto (B) e ajustar.
- **5º foto:** Aplicar carenagem lado direito utilizando itens N° 2 e N° 3 e ajustar.
- **6º/7º/8º foto:** Aplicar anilha e parafuso de origem no ponto (C) e ajuste.
- **9º foto:** Aplicar itens N° 1 e apertar os parafusos.
- **10º/11º fotos:** Apertar todos os parafusos.
- **12º foto:** Aplicar item N° 4 nos pontos (A) e (C).



Crash Bar
BMW FGS 650 2008-12
Ref: 2AS1250005

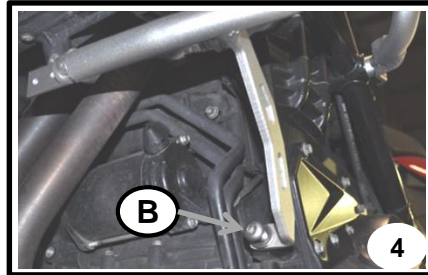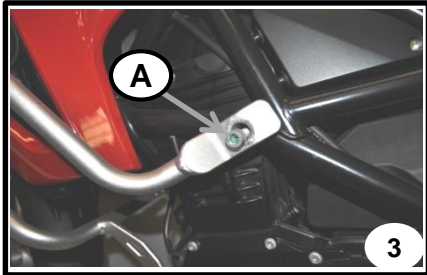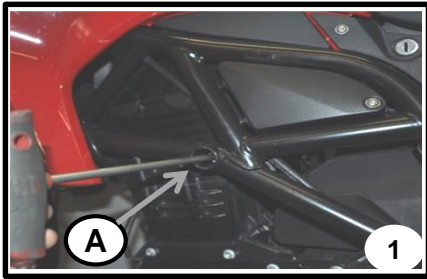

4	-	Plastic Cap	-	2
3	-	Washer	M10	2
2	-	Screw Round head ISO 7380	M 10 X 1.5 X 25	2
1	-	Socket head Cap Screw	M 6 X 16	2
Item Nº	Reference	Component	Description	Quant.

Assembly Sequence

English:

Caution - Follow the assembly instruction as shown by the photos.

(Photo 1) Remove bolts origin point (A) and (C).

(Photo 2 and 3) Apply left side Crash Bar at the point (A) using original screw.

(Photo 4) Apply item N°2 and N°3 in point (B) and adjust.

(Photo 5) Apply right side Crash Bar using items N°2 and N°3 and adjust.

(Photo 6,7,8) Apply washer and screw of origin on the point (C) and adjust.

(Photo 9) Apply items N°1 and tighten the screws.

(Photo 10 and 11) Tighten all screws.

(Photo 12) Apply item N°4 in points (A) and (C).

Crash Bar BMW F GS 650 2008-12

