

Français:

Attention - suivre l'ordre de montage, vous pouvez le voir sur les photos

(Photo A et B) Enlever les vis d'origine (3 unités).

(Photo C et D) Appliquer la protection utiliser Item N°3 entre la protection et le cadre de la moto dans les zones où ont été les vis d'origine précédemment retirés, après appliquer Item N°2 (vis).



Exécuter la même séquence de l'autre côté

(Photo E) Pour terminer l'Assemblée utilise Item N°1 pour unir les deux côtés de la protection (gauche et droite)



Trail Crash Bar Aluminium
Suzuki DL 1000V-Strom 2000-13
Ref: 2AS1250006



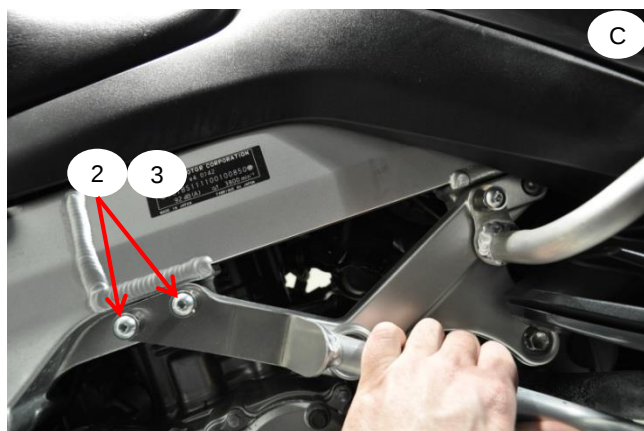

3		Bushing Aluminium	Ø17xØ9x12 mm	6
2		Screw Round head with Washer false	M8x45	6
1		Socket head Cap Screw	M6x16	2
Item N°	Reference	Component	Description	Quant

Attention - Follow the installation sequence has you can see in the photos
(Photo A and B) Remove the origin Screws (3 units).
(Photo C and D) Apply the protection using Item N°3 (Bushing) between the protection and the frame of the bike in the boxes where were the origin screws previously removed after apply Item N°2 (Screws).
 Execute the same sequence to the other side
(Photo E) To finish the assembly use Item N°1 to unite the two sides of the protection (left and right)

Trail Crash Bar Aluminium Suzuki DL 1000 V-Strom 2000-13

