

Français:

Attention - suivre l'ordre de montage a, vous pouvez le voir sur les photos

(Photo A et B) Enlever les vis d'origine (3 unités).




(Photo C et D) Appliquer la protection utilise Item N°3 entre la protection et le cadre de la moto dans les zones où ont été les vis d'origine précédemment retirés après appliquer Item N°2 (vis).

Exécuter la même séquence pour le l'autre côté

(Photo E) Pour terminer l'Assemblée utilise Item N°1 pour unir les deux côtés de la protection (gauche et droite).



Trail Crash Bar Aluminium
Suzuki DL 650 V-Strom 2012-14
Ref: 2AS1250012

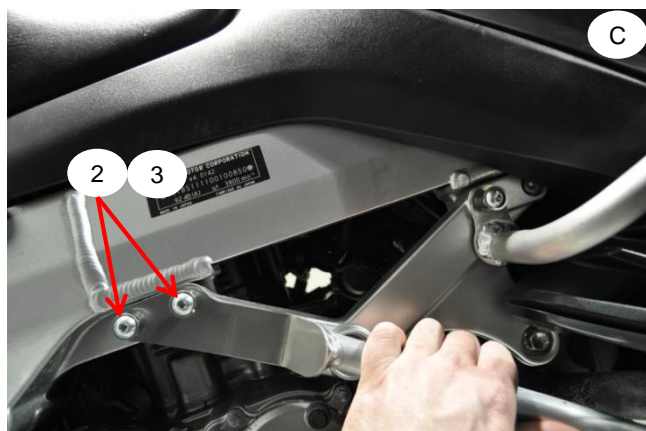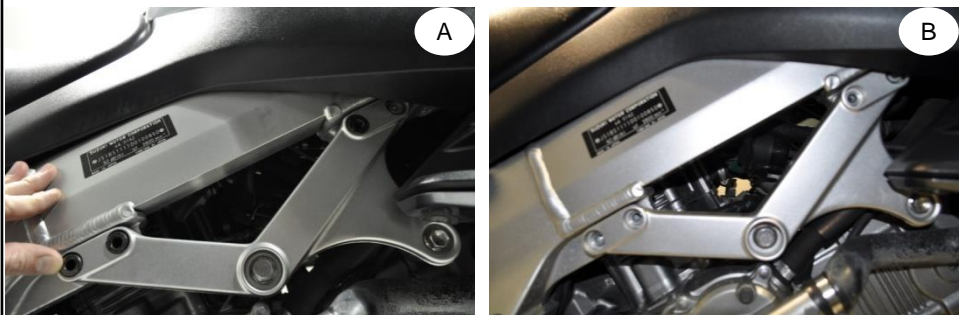

Item N°	Reference	Component	Description	Quant
3		Bushing Aluminium	Ø17xØ9x12 mm	6
2		Screw Round head with Washer false	M8x45	6
1		Socket head Cap Screw	M6x16	2

Attention - Follow the installation sequence as you can see in the photos
(Photo A and B) Remove the original Screws (3 units).
(Photo C and D) Apply the protection using Item N°3 (Bushing) between the protection and the frame of the bike in the boxes where were the original screws previously removed after apply Item N°2 (Screws).
 Execute the same sequence to the other side
(Photo E) To finish the assembly use Item N°1 to unite the two sides of the protection (left and right)

