

Français:

Attention - Suivre l'ordre de montage, vous voir sur les photos


(Photo A) Monter la protection en utilisant des vis Item N°2 sur le cadre de la Moto.

(Photo B) Appliquer le Item N°6 (Brige) dans la même position comme vous voir, utiliser Item N°5 pour permet fixer la protection sur le Item N°6 (Brige)

(Photo C) Supprimer temporairement la protection du moteur et des supports originaux

(Photo D) Continuez l'installation en utilisant pour cela les composants originaux (vis)


(Photo E) Pour terminer l'Assemblée utilise Item N°4 pour unir les deux parties de la protection et réinstallez la protection du moteur.

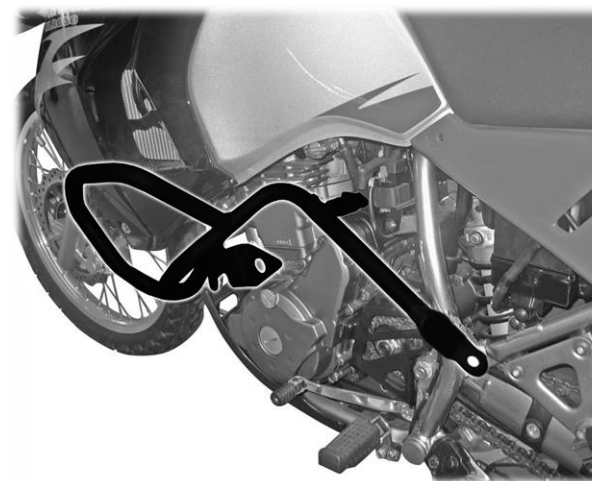

Trail Crash Bar Aluminium

Kawasaki KLR 650 2008-15

2AS1250014

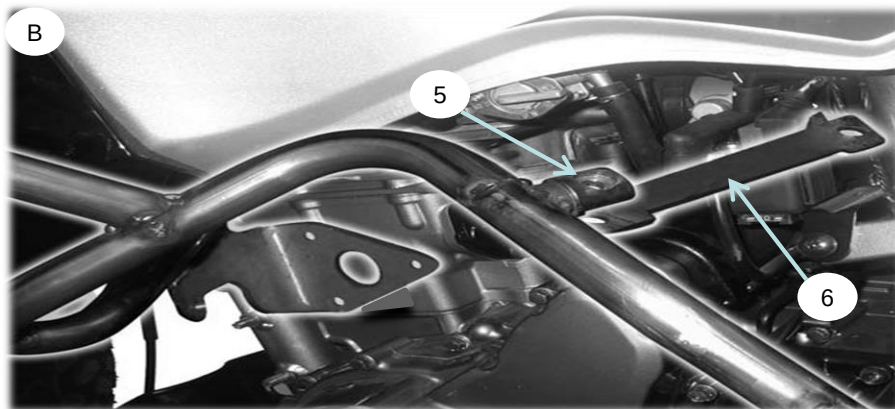

6	-	Bridge					1
5	-	Socket head Cap Screws				M6x20 - DIN 912	2
4	-	Socket head Cap Screws				M6x16 - DIN 912	2
3	-	Nut Nyloc				M6 - DIN 985	2
2	-	Hex Screw With Washer false				M8x40 - DIN 6921	2
1	-	Hex Screw With Washer false				M6x20 - DIN 6921	2
Item N°	Reference	Component				Description	Quant.

Attention - Follow the installation sequence has you see in the photos
(Photo A) Mount the protection using Screw item N°2 on the frame bike
(Photo B) Apply the Bridge in the same position has you see, use Item N°5 to join the protection to the bridge
(Photo C) Remove temporarily the engine protection and the original supports
(Photo D) Continue the installation using for this the original components (Screws and Bolts)
(Photo E) To finish the assembly use Item N°4 to unite the two parts of the protection and reseal the engine protection

Trail Crash Bar Aluminium Kawasaki KLR 650 2008-15

