

Francés:

Attention-suivre l'ordre de montage comme vous pouvez le voir sur les photos.

(Photo A, B, C) Enlever toutes les vis et les écrous d'origine comme vous pouvez le voir.

(Photo D) Appliquer Item N°6 **(Photo E, F, G)** appliquer la protection côté gauche utiliser Item N°1 (vis) Item N°4 (rondelle) Item N°6, Item N°3 (vis).

(Photo H) Appliquer Item N°6

(Photo I, J) Mont Protection côté droit utiliser Item N°3 (vis).

(Photo K) Appliquer Item N°4 (rondelle) et Item N°5 (écrou) sur Item N° 1 précédemment monté et après Item N°2 (vis) pour rejoindre les pièces trop de la protection (gauche et droite).

(Photo L) Ajuster comme vous pouvez voir vis (N°1) et l'écrou (N°5) déjà monté.

(Photo M) Serrer toutes les vis.





Trail Crash Bar Aluminium

KTM DUKE 125 2011/14

KTM DUKE 200 2012/14

Ref: 2AS1250018

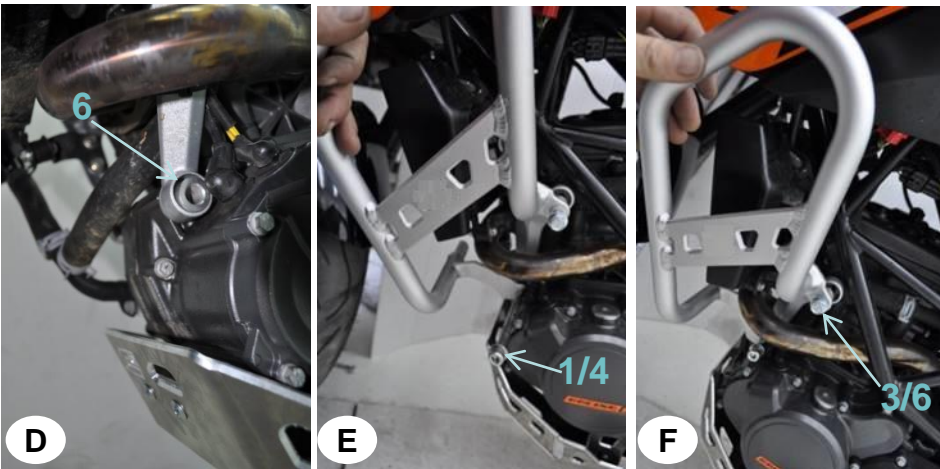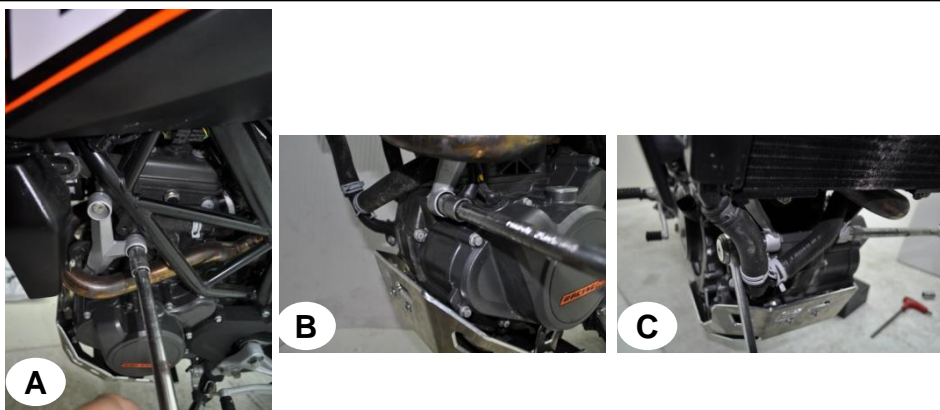

Item N°	Reference	Component	Description	Quant.
6		Bushing Aluminium	Ø 20 X Ø 11 X 15 mm	4
5		Nut Nyloc	M 10	1
4		Washer	M 10	2
3		Hex Screw with washer false	M 8 X 35	2
2		Socket head Cap Screw	M 6 X 16	2
1		Socket head Cap Screw	M 10 X 1.5 X 160	1

Attention - Follow the installation sequence as you can see in the photos.
(Photo A,B,C) Remove All Screws and Nuts from origin as you can see.
(Photo D) Apply Item N°6 (Bushing) **(Photo E,F,G)** Apply protection Left side using Item N°1 (Screw) Item N°4 (Washer) , Item N°6 (Bushing) Item N°3 (Screw).
(Photo H) Apply Item N°6 (Bushing).
(Photo I,J) Mount Protection Right side Using Item N°3 (Screw).
(Photo K) Apply Item N°4 (Washer) and Item N°5 (Nut) in to Item N°1 previously mounted and after apply Item N°2 (Screws) to join the two parts of the protection (Left and Right side).
(Photo L) Adjust as you can see Screw (N°1) and Nut (N°5) previously mounted.
(Photo M) Tight All Screws .

Trail Crash Bar Aluminium
KTM DUKE 125 2011/14
KTM DUKE 200 2012/14

