

Português:

Atenção – Seguir a Sequência de Montagem da Protecção Carenagem Pelas Fotos.

(Foto 1) Retirar paraf. de origem do ponto **A** (por dentro 2 e por fora 1, só do lado direito) e retirar protecção em plastico.

(Foto 2 ,3) Desapertar paraf. Ponto **B** e porca de origem ponto **C**, são necessárias 2 chaves.

(Foto 4) Aplicar prot. de Carenagem lado direito utilizando itens Nº 2 (Ponto **C**), item Nº 5

e item Nº 4 (Ponto **D**) e apertar paraf.

(Foto 5, 6) Desapertar paraf. Ponto **E**, porca de origem ponto **F**, utilizando 2 chaves (lado esq.)

(Foto 7 , 8) Aplicar prot. de Carenagem lado esq. utilizando item Nº 4 (Ponto **G**) e item Nº 3

(Ponto **I**), item Nº 5 e apertar paraf.

(Foto 9) Aplicar a união em tubo utilizando itens Nº 1 e ajustar (só do lado direito).

(Foto 10) Aplicar peça plastica de origem ponto **A**(lado direito)

(Foto 11) Aplicar paraf. Item Nº 1 na união do lado esq. e apertar parafusos.



(Foto 12) Aplicar topos plasticos item nº 6 (ponto **J**) utilizando maço de borracha.



Trail Crash Bar Aluminium
TRIUMPH 800-800 XC 2011/14

Ref: 2AS1250020



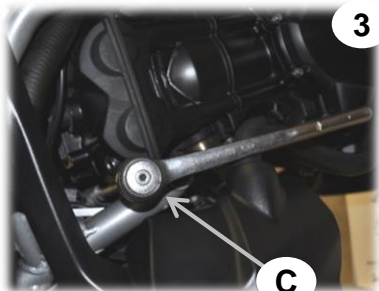

6	-	Round Tube Plastic Inserts	REF;	2
5		Nut Nyloc	M 10	2
4		Hex Screw with washer false	M 8 X 20	2
3	-	Socket head Cap Screw	M10 X 1,5 X 70	1
2		Socket head Cap Screw	M10 X 1,5 X 60	1
1	-	Socket head Cap Screw	M 6 X 16	4
Item N°	Reference	Component	Description	Quant.

Attention – Follow the Assembly sequence as seen in the pictures.

(Photo 1) Remove origin screws from the Point A (inside 2 screws and outside 1 screw, just on the right side) and remove plastic protection

(Photo 2 ,3) Loosen screw Point B and nut of origin Point (C), 2 keys are required.

(Photo 4) Apply the right side protection using items N°2 (Point C), item N°5 and item N°4 (Point D) and tighten screw.

(Photo 5 , 6) Loosen screw (Point E) and nut of origin (Point F), using 2 keys (left side).

(Photo 7 , 8) Apply left side protection using item N°4 (Point G) and item N°3 (Point I), item N°5 and tighten screw

(Photo 9) Apply the Union on the pipe using items N°1 and adjust (only on the right side).

(Photo 10) Apply plastic piece of origin Point A (right side).

(Photo 11) Apply screw Item N°1 on the Union Left side and tighten screws

(Photo 12) Apply plastic top item N°6 (Point J).

Trail Crash Bar Aluminium TRIUMPH TIGER 800 - 800 XC 2011/14

