

Français:

Attention-Suivre l'ordre de montage, vous pouvez le voir sur les photos

(Photo A) Supprime l'origine vis Point 1, Point 2 et la partie en plastique.

(Photo B) Appliquer la protection droite en utilisant le Item N°2 (vis) et ajuster.

(Photo C) Appliquer Item N°1 (vis) et l'ajuster.



(Photo D et E) Serrer toutes les vis.

(Photo F) Appliquer le côté gauche avec la même séquence, attention vous avez un support de fixation qui doit être le premier Point 3.



(Photo G) Protection appliquées sur la Moto.



Trail Crash Bar Aluminium
YAMAHA XTZ 1200
SUPER TÉNÉRÉ 2010-14
Ref: 2AS125019

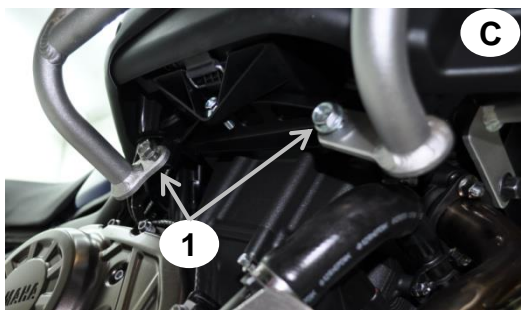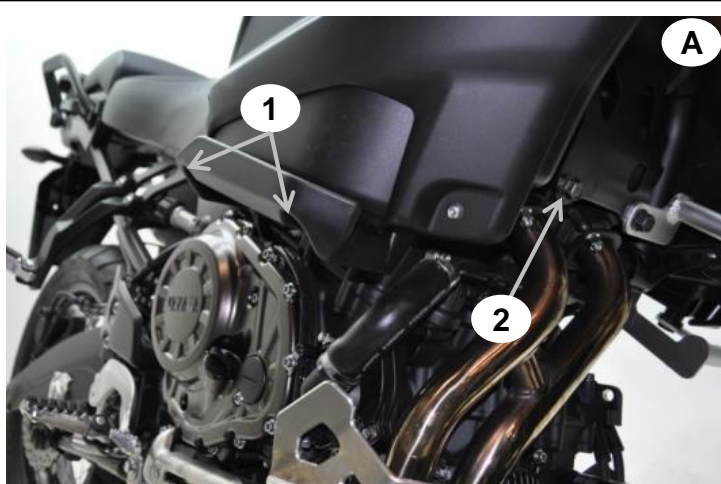

Trail Crash Bar Aluminium
YAMAHA XTZ 1200
SUPER TÉNÉRÉ 2010/14

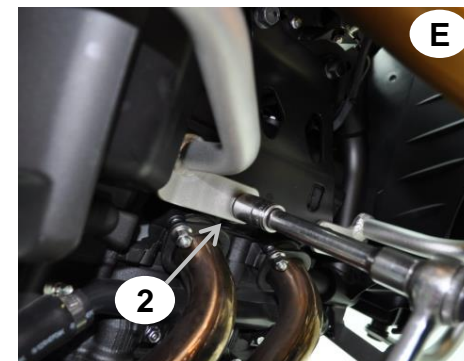

Item N°	Reference	Component	Description	Quant.
2		Original Screw		2
1		Hex Screw with washer false	M 8 X 16	4

Attention - Follow the installation sequence as you can see in the photos
(Photo A) Remove original Screws Point 1, Point 2 and plastic part.
(Photo B) Apply protection Right side using item N° 2 (Screw) and adjust.
(Photo C) Apply item N° 1 (Screws) and adjust.
(Photo D and E) Tight all Screws.
(Photo F) Apply the Left side using the same sequence on the Right side, attention you have a support bracket that should fit first Point 3.
(Photo G) Protections applied on the bike.