





**REAR BRAKE FUID
RESERVOIR GUARD**


Ref.: 2AS2180085

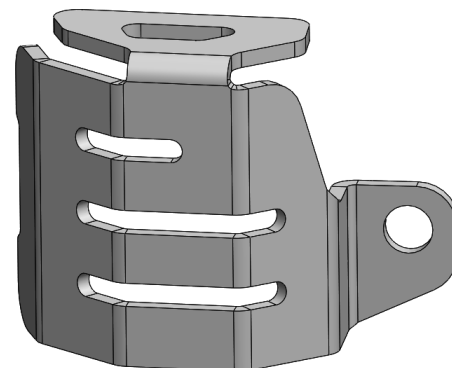



N.m (TORQUE)		
	AÇO / STEEL	INOX
M4	2,7	0,8
M5	5,5	1,7
M6	9,7	3
M8	23	7,9
M10	47	14
M12	80	24

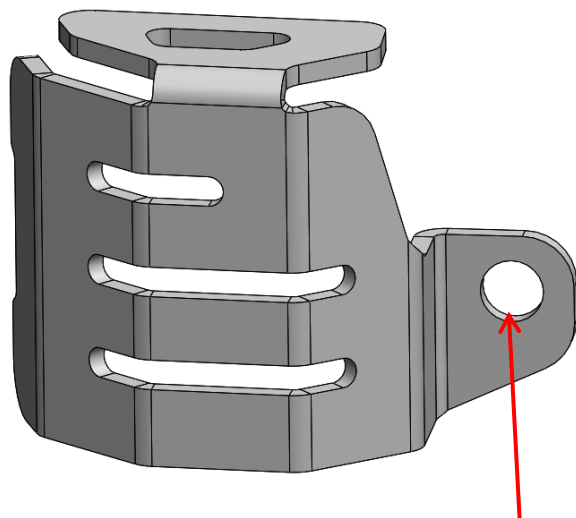

PARAFUSO DE ORIGEM
ORIGIN SCREW



REAR BRAKE FLUID RESERVOIR GUARD

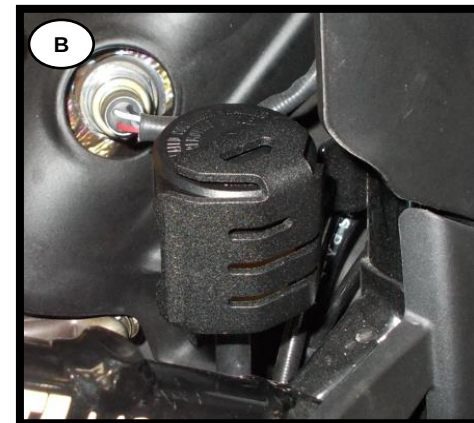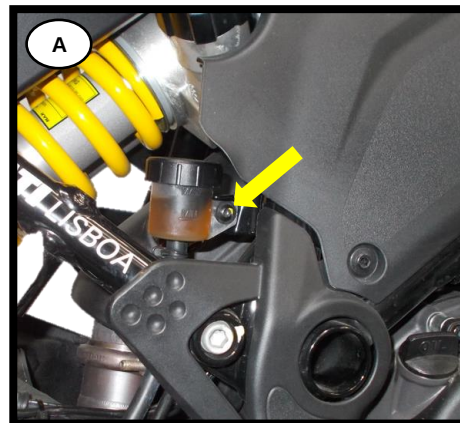

English:

Attention: Follow the installation sequence as shown in the photos.

- **Photo A:** Remove origin screw marked in the photo.
- **Photo B:** Assemble protection as origin screw.

Add a little medium strength loctite and torque all screws to the correct value.

Português:

Atenção – Seguir a sequência de montagem que pode ver nas fotos.

- **Foto A:** Remover parafuso de origem marcado na foto.
- **Foto B:** Montar proteção com o parafuso de origem.

Adicionar um pouco de loctite nos parafusos e apertar todos os parafusos com o valor correto de torque.

Français:

Attention: Suivre le séquence de photos d'assemblage.

- **Photo A:** Enlever le vis d'origine marqué sur la photo.
- **Photo B:** Assembler la protection avec le vis d'origine.

Ajouter un peu de loctite sur les vis et torque toutes les vis avec le bonne valeur.